 




AquaTimer™

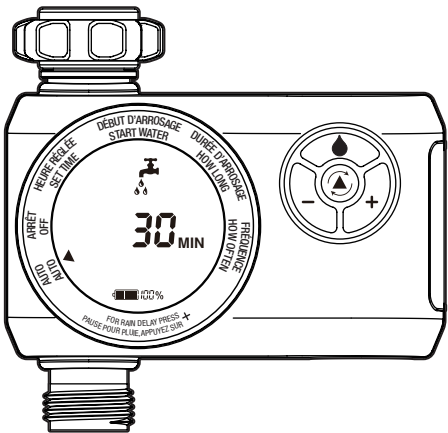 


33015 / 33016

One-Zone Electronic Water Timer

User Instructions ■ English


33015_INS_ENG_00

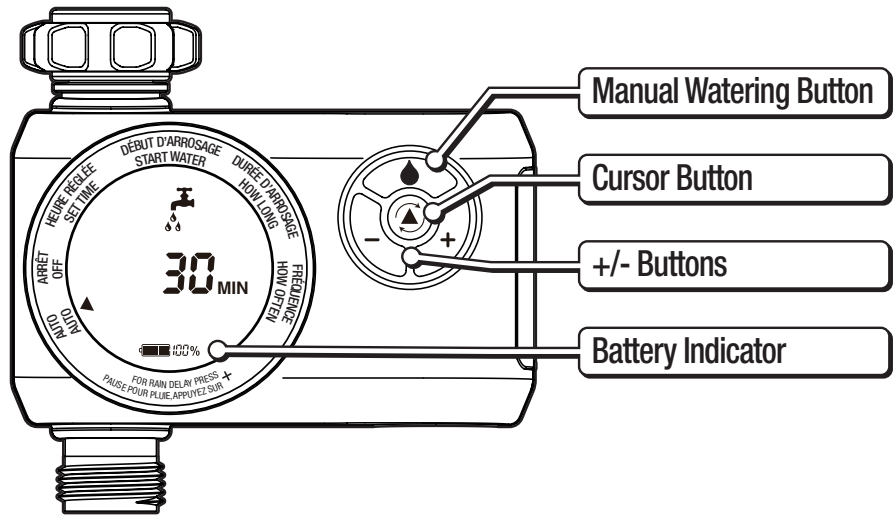

1 Battery Installation & Assembly

Batteries

 - Install **2 × AA alkaline batteries** by removing the battery holder from the back of the timer and inserting the batteries as indicated. Replace the battery holder.
- **Note:** Do not use rechargeable batteries. Recycle batteries after use.

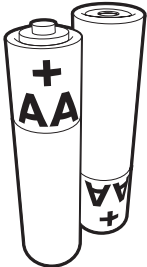

Installation

- Attach the timer to an outside faucet and turn on the water. Leave the faucet on while the timer is attached.
- **Note:** You may program the timer before attaching it to the faucet.

We recommend replacing batteries when the indicator reaches 20%

2 Setting the Clock

- Touch any button to wake the timer.
- Using the **Cursor Button** (⬅️), move the arrow to **Set Time**.
- Press the **⬅️** & **➡️** buttons to adjust the clock to the current time.
- Press the **Cursor Button** (⬅️) again to set the time and move to the next setting, **Start Water**.



3 Select when to water

- With the arrow pointing to **Start Water**, use the **⬅️** & **➡️** buttons to select the first time of the day you want to water. All remaining watering cycles during the day will be based on this time.
- Press the **Cursor Button** (⬅️) to move to the next setting.



4 Select How Long to Water

- With the arrow pointing to **How Long** use the **⬅️** & **➡️** buttons to select the length of each watering cycle.
- Cycles can be up to **360 minutes (6 hours)** in duration.
- Press the **Cursor Button** (⬅️) to move to the next setting.



5 Select How Often to Water

- With the arrow pointing to **How Often** use the **⬅️** & **➡️** buttons to select the watering frequency.
- Watering can be as often as **Every 1 Hours** or little as **Every 7 Days (once per week)**
- Press the **Cursor Button** (⬅️) to complete programming.
- The timer will enter **Auto** mode and the program will be active. Watering will begin with the next available watering time.





 
6 Auto Mode

- After programming, the timer will be in **Auto** mode.
- The screen display will toggle between the current **TIME** and the **NEXT START TIME**. This will allow you to see at a glance what will happen next.
- If the next watering cycle is more than 24 hours away, the **NEXT START TIME** will be displayed in days instead showing a time.





7 Rain Delay Mode

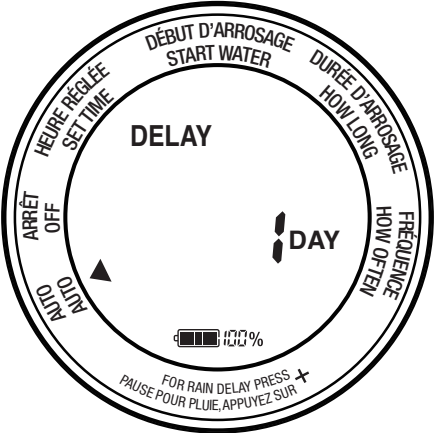- If there is rain in the forecast and you wish to temporarily stop watering, you can use Rain Delay.
- **Rain Delay Mode** will stop all watering for up to 7 days.
- After the delay period, the watering program will begin running automatically.
- To activate **Rain Delay Mode**, make certain the arrow is pointing to **AUTO**. Press the  key to select the delay period. You can reduce the delay period with the  key.
- In **Rain Delay Mode**, the screen will toggle between the current **TIME** and the remaining **DELAY** time. If the delay is greater than 12 hours, the **DELAY** will be shown in **DAYS**.





8 Off Mode

- If you wish to stop watering for an extended period, push the **Cursor Button**  until the arrow is pointing to **OFF**.
- The timer will not water automatically while in this mode. The screen will display the word **OFF** in large letters.
- To start watering automatically again, simply press the **Cursor Button**  until the arrow is pointing to **AUTO**. The program will begin watering at the next available **Start Time**.



 
9 Manual Watering

- If you need to turn on the water manually to do a little extra watering or to wash the car, simply press the button with the **droplet symbol**.
- When you press the button, the screen will display how long the valve will be open. You can adjust this time using the  &  buttons. After a few seconds the valve will open and water will flow.
- The screen will toggle between the remaining **MANUAL** watering time and the current **TIME** of day.



10 Timer Reset

- If you need to completely erase all settings in the timer and return it to it's original state, press and hold the Cursor button for 7 seconds.
- The screen will display RESET.
- **NOTE:** All programming will be lost when the timer is RESET.

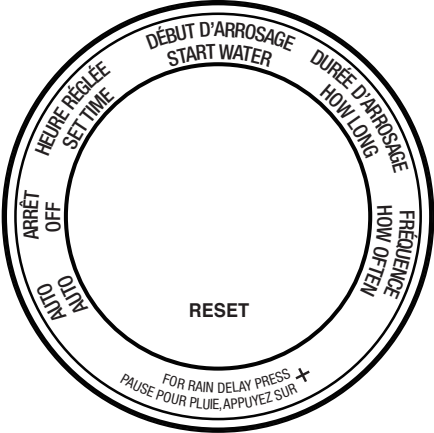

Warning: Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures.