 




AquaTimer™

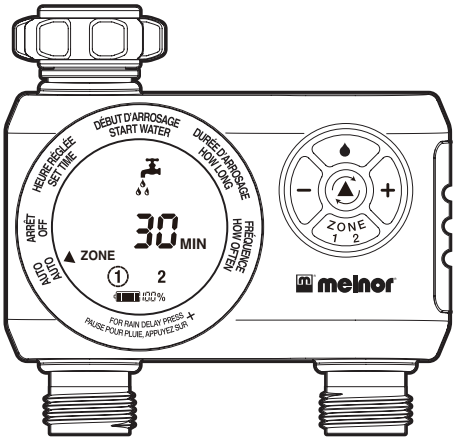 


33100 / 33101

Two-Zone Electronic Water Timer

User Instructions ■ English


33100_INS_ENG_00

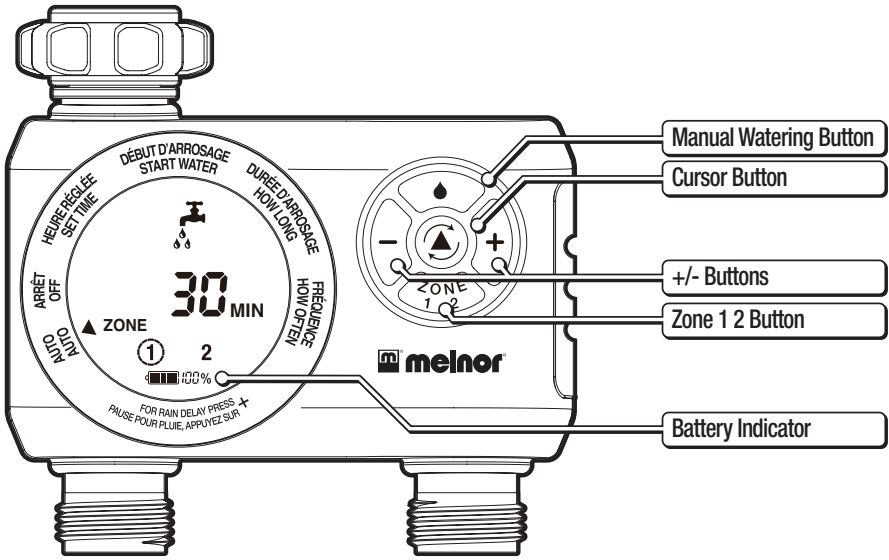

1 Battery Installation & Assembly

Batteries

 - Install **2 × AA alkaline batteries** by removing the battery holder from the back of the timer and inserting the batteries as indicated. Replace the battery holder.
- **Note:** Do not use rechargeable batteries. Recycle batteries after use.

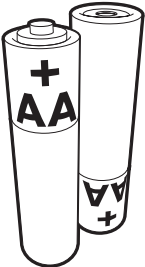


Installation

- Attach the timer to an outside faucet and turn on the water. Leave the faucet on while the timer is attached.
- **Note:** You may program the timer before attaching it to the faucet.

We recommend replacing batteries when the indicator reaches 20%


2 Setting the Clock

 - Touch any button to wake the timer.
- Using the **Cursor Button** (⬅️), move the arrow to **Set Time**.
- Press the **⬅️ & ⏸️** buttons to adjust the clock to the current time.
- Press the **Cursor Button** (⬅️) again to set the time and move to the next setting, **Start Water**.

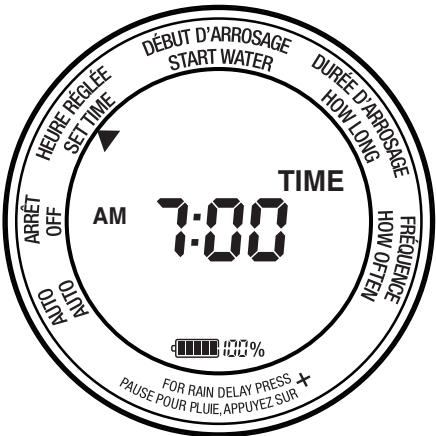

3 Select when to water

 - With the arrow pointing to **Start Water**, use the **⬅️ & ⏸️** buttons to select the first time of the day you want to water. All remaining watering cycles during the day will be based on this time.
- Press **ZONE** (👉) to change the zone. You must first enter a start time for each zone you are programming before any other settings for a zone.
- Press the **Cursor Button** (⬅️) to move to the next setting.

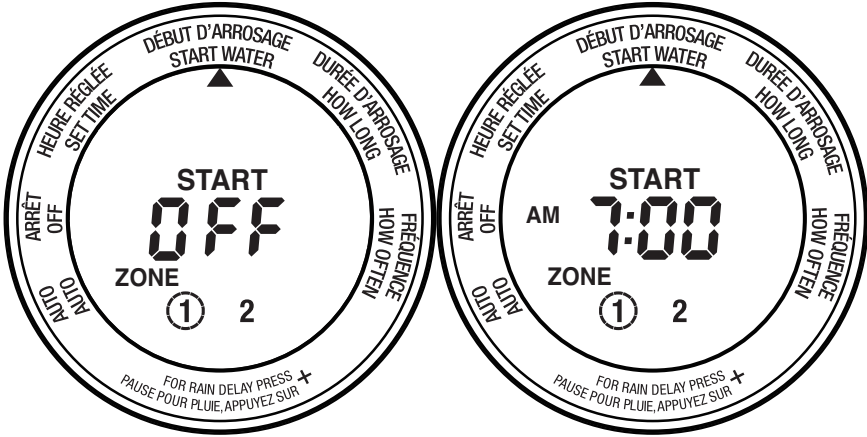


4 How Long to Water

- With the arrow pointing to **How Long** use the **⬅️ & ⏸️** buttons to select the length of each watering cycle.
- Cycles can be up to **360 minutes (6 hours)** in duration.
- Press **ZONE** (👉) to change the zone. You must set **How Long** for each zone you are programming before proceeding.
- Press the **Cursor Button** (⬅️) to move to the next setting.



5 How Often to Water

 - With the arrow pointing to **How Often** use the **⬅️ & ⏸️** buttons to select the watering frequency.
- You will be able to water as often as every 1 hour, every day or as infrequently as once every 7 days.
- Press **ZONE** (👉) to change the zone or the **Cursor Button** (⬅️) to move to the next setting. You must set **How Often** for each zone you are programming before proceeding.

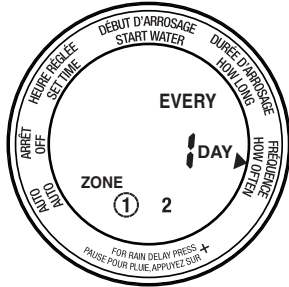



EVERY 1 DAY		SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
EVERY WEEK								
EVERY 2 DAY		SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
WEEK ONE								
WEEK TWO								
EVERY 3 DAY		SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
WEEK ONE								
WEEK TWO								

 
6 Auto Mode

- After programming, the timer will be in **Auto** mode. Your watering programs will only operate when the timer is in **Auto** mode.
- If the timer is not in **Auto** mode, press the **Cursor Button** (⬅️) to switch to **Auto**.
- The screen display will alternate between the current **TIME** and the **NEXT START TIME** for each zone. This will allow you to see at a glance what will happen next.
- If the next watering cycle is more than 12 hours away, the **NEXT START TIME** will be displayed in days instead showing a time.





 
7 Rain Delay Mode

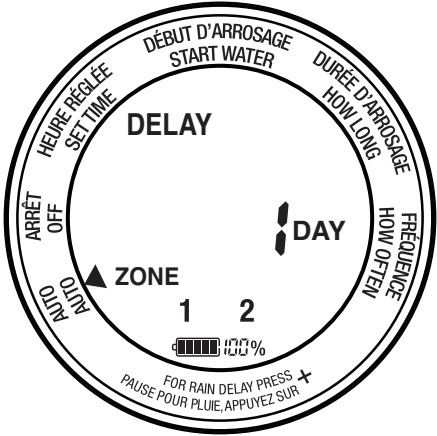
 
- If there is rain in the forecast and you wish to temporarily stop watering, you can use Rain Delay.
- **Rain Delay Mode** will stop all watering for up to 7 days.
- After the delay period, the watering program will begin running automatically.
- To activate **Rain Delay Mode**, make certain the arrow is pointing to **AUTO**. Press the  key to select the delay period. You can reduce the delay period with the  key.
- In **Rain Delay Mode**, the screen will toggle between the current **TIME** and the remaining **DELAY** time. If the delay is greater than 12 hours, the **DELAY** will be shown in **DAYS**.





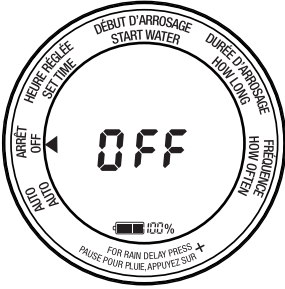


8 Off Mode

- If you wish to stop watering for an extended period, push the **Cursor Button**  until the arrow is pointing to **OFF**.
- The timer will not water automatically while in this mode. The screen will display the word **OFF** in large letters.
- To start watering automatically again, simply press the **Cursor Button**  until the arrow is pointing to **AUTO**. The program will begin watering at the next available **Start Time**.




Note: Setting the timer to **OFF** disables all watering zones. In order to disable a specific zone (or zones), use the **Cursor Button**  to move to **HOW LONG**. Ensure you are adjusting the desired watering zone by using the **ZONE**  button. Adjust the **HOW LONG** setting to "0". To reactivate the zone, adjust the **HOW LONG** setting back to the desired watering duration.

 
9 Manual Watering

- Press **Manual On/Off**  ( on multi-language models)
- Press **ZONE**  to select the zone you want to open. Then press the  or  button to adjust the amount of time you want the valve to be open.
- The valve will open after a few seconds and automatically close after the selected time.



10 Timer Reset

- If you need to completely erase all settings in the timer and return it to it's original state, press and hold the **Cursor Button**  for 7 seconds.
- The screen will display **RESET** to confirm the action.
- **NOTE:** All programming will be lost when the timer is **RESET**.

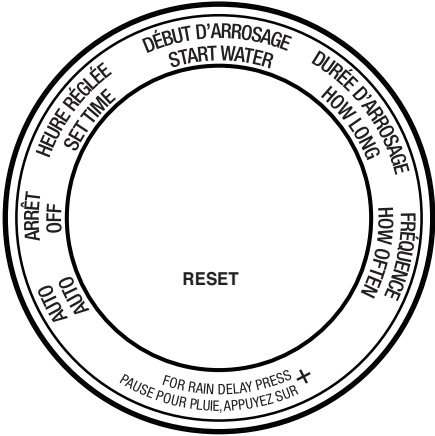

Warning: Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures.