## Mimelnor<sup>®</sup>



## ATTENTION Read this first.

If the sprinkler stops working due to debris/dirt (poor water quality), please remove it from the hose-end and the cleaning tool (a pin) located in the end of oscillator, then connect to a tap (faucet) with water running, spin the tube gently back and forth for few minutes. Screw the tool firmly back into place. The sprinkler should work normally now.

